

# Installation Manual

## Multisealant GR



**1**



Make sure that the service penetration and the gap are free from dust, dirt and grease. Moisten the structure, if necessary.

**3**



Smooth the joint with a damp spatula or filler knife.

**2**



Apply Multisealant GR generously in the gap to prevent air bubbles <sup>1)</sup>.

**4**



Fill in the conformity statement and paste it next to the fireproof seal.

<sup>1)</sup>When using backing, cut it slightly wider than the joint width and make sure it is applied to the correct depth in the joint.



For use and for more information about an application, refer to the Mulcol documentation and local and international approvals. See the **Mulcol Fire Protection app** for the correct application in combination with fire resistance, or use our selector at [www.mulcol.com](http://www.mulcol.com)  
For professional use only.

**MULCOL**  
INTERNATIONAL