

Installation Manual

Multimastic SP




1




Make sure that the service penetration and the gap are free from dust, dirt and grease. Moisten the structure, if necessary.

4

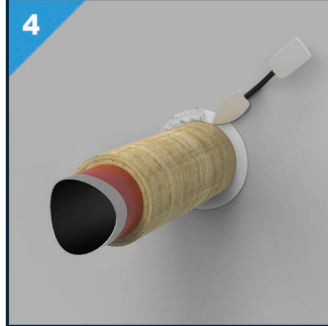

Smooth the joint with a damp spatula or filler knife.

2




If backing is applied, cut it slightly wider than the gap width and make sure that it is applied to the correct depth in the structure.

5



Fill in the conformity statement and paste it next to the fireproof seal.

3

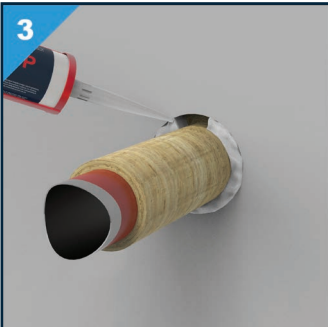

Apply Multimastic SP generously in the gap to prevent air bubbles.



For use and for more information about an application, refer to the Mulcol documentation and local and international approvals. See the **Mulcol Fire Protection app** for the correct application in combination with fire resistance, or use our selector at www.mulcol.com
For professional use only.

MULCOL
INTERNATIONAL