

Installation Manual

Multisealant A




1




Make sure the joint is free of dust, dirt and grease. Moisten the construction.

3

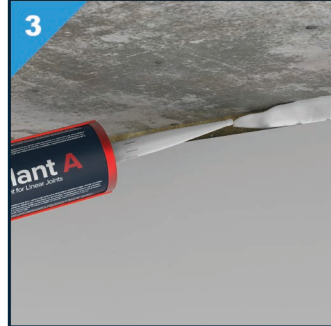

Apply Multisealant A generously to the joint to prevent air bubbles.

2



If backing is applied, cut it slightly wider than the joint width and make sure that it is applied to the correct depth in the joint.

4



Smooth the joint with a damp spatula or filler knife.



For use and for more information about an application, refer to the Mulcol documentation, local and international approvals. See the **Mulcol Fire Protection app** for the correct application in combination with fire resistance, or use our selector at www.mulcol.com For professional use only.

MULCOL
INTERNATIONAL