
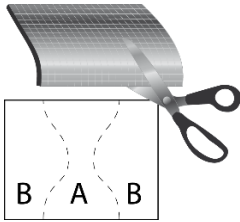
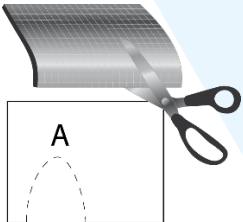
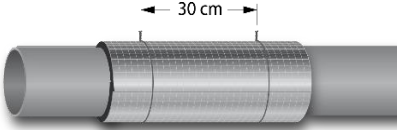
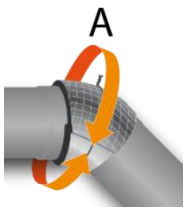
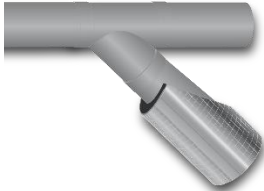
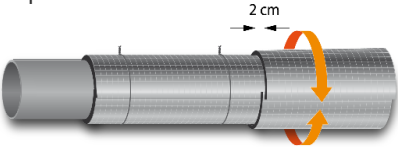
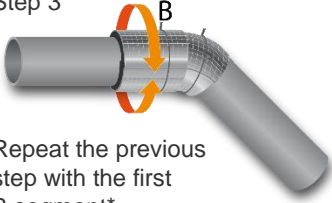
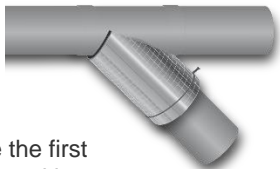

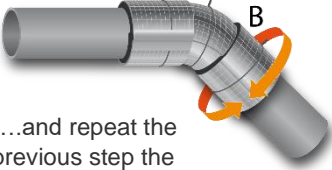
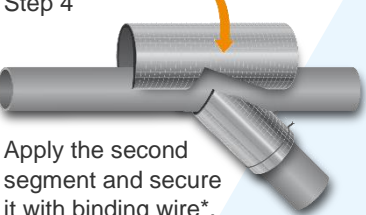



APPLICATION MANUAL

SONIMASS – sound reducing pipe insulation

General: Make sure the pipe is clean and dry before you start insulating.

| Straight piping | Bend 45 degrees | Pipe branching |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Step 1</p>  <p>Cut the insulation sheet to the right size (using knife or a scissor) and apply the sheet to the pipe with an overlap of min. 3 cm</p> | <p>Step 1</p>  <p>Cut the segments to the correct size and shape</p> | <p>Step 1</p>  <p>Cut the segments to the correct size and shape</p> |
| <p>Step 2</p>  <p>Apply around the 30 cm binding wire.</p> | <p>Step 2</p>  <p>Apply segment A to the pipe with an overlap of 3 cm and secure with binding wire.</p> | <p>Step 2</p>  <p>Apply the first segment to the branch of the pipe</p> |
| <p>Step 3</p>  <p>Apply the next sheets with min. 2 cm overlap to the previous sheet.</p> | <p>Step 3</p>  <p>Repeat the previous step with the first B segment*.</p> | <p>Step 3</p>  <p>Secure the first segment with binding wire.</p> |
| <p>Step 4</p>  <p>Apply binding wire and clean the longitudinal seam and cover it with aluminium tape</p> | <p>Step 4</p>  <p>....and repeat the previous step the second B segment*.</p> | <p>Step 4</p>  <p>Apply the second segment and secure it with binding wire*.</p> |

DISCLAIMER
De omschreven toepassingen en aanbevelingen zijn zo correct mogelijk weergegeven maar zijn vrijblijvend en bieden geen garanties. Bij twijfel over toepassing of verwerking zelf een test uitvoeren of contact met ons opnemen. We behouden ons het recht om zonder kennisgeving vooraf, productgegevens te wijzigen.

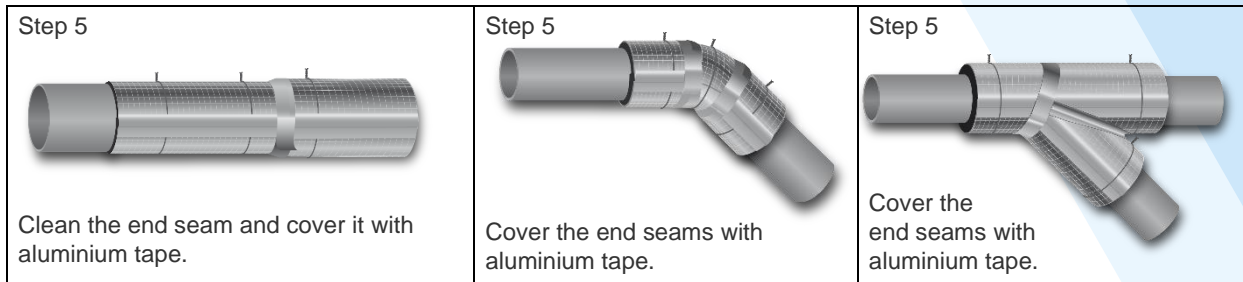

* Apply the segment for bends and branches with an overlap of minimal 2 cm.

- Note:
- The above mentioned application manual is also valid for other versions of Sonimass.
 - It is also possible to apply Sonitape ACU instead of aluminium tape.
 - For the black coloured version there is a black aluminium tape available.